

DrivePro Body Docking Toolbox

User Manual (Windows)

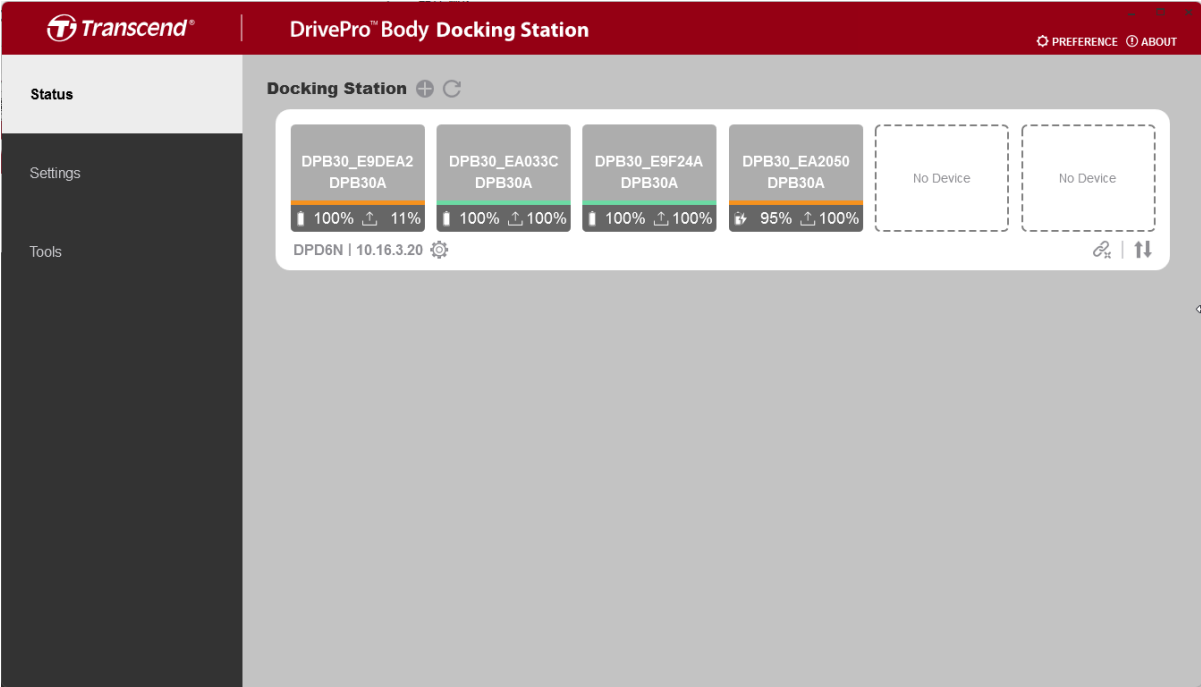


Table of Contents

- **1. System Requirements**
 - **Supported Systems**
 - **Hardware Requirements**
 - **Supported Models**
- **2. Getting Started**
- **3. Status**
 - **3-1. Adding a Docking Station**
 - **3-2. Docking Station Information**
 - **Overview**
 - **Advanced Settings**
 - **3-3. Disconnecting Docking Station and Updating Camera Firmware**
- **4. Settings**
 - **Device Settings**
 - **Video Settings**
 - **Video Stamp**
- **5. Tools**
- **6. Support**

1. System Requirements

Supported Systems

- Microsoft Windows 10 or later (64-bit)

Hardware Requirements

- Desktop or notebook computer

Supported Models

Docking Stations

- TS-DPD6N
- TS-DPD6C


2. Getting Started

Download the Docking Toolbox software from the official website:

[Software Download](#)

3. Status

The **Status** page displays connection information for the docking station, as well as the charging and backup status of the DrivePro Body.

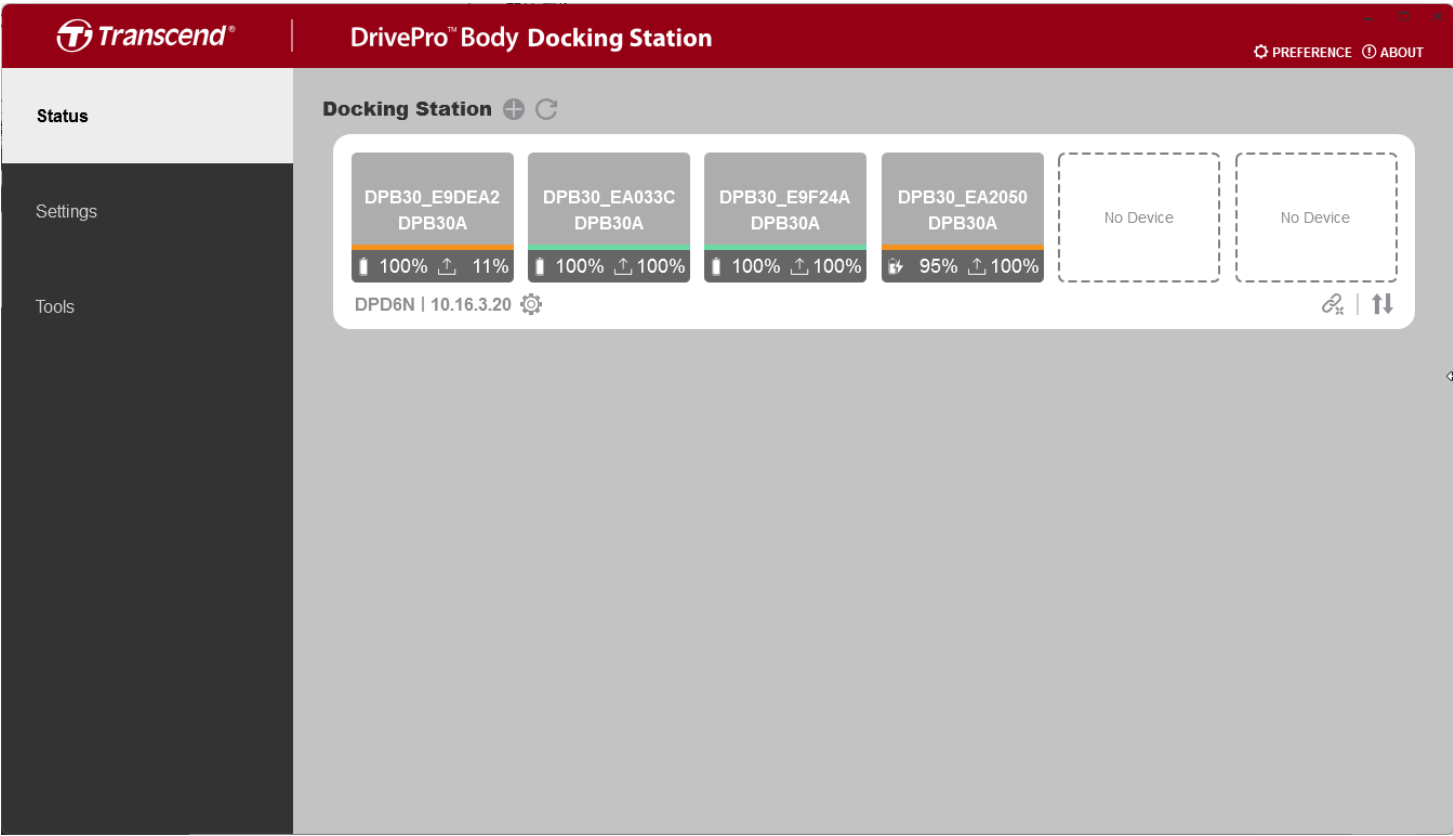

3-1. Adding a Docking Station

Add new docking

10.16.3.20

IP Address

10.16.3.20

Host Name

Docking Station

MAC Address

7C-35-48-F0-00-00

Add

Cancel

- To add a docking station, click .
- Once the device is detected, select the docking station you want to add and click the **Add** button.


3-2. Docking Station Information

Click  to view detailed information about the docking station.

Docking Information

Overview

Advanced settings

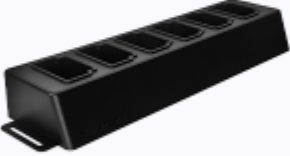

Host Name	DPD6N
Firmware Ver	v1.22.1
IP Address	10.16.3.20
MAC Address	7C:35:48:F0:00:00

Close


Overview



- On the Overview page, you can view the docking station's host name, firmware version, IP address, and MAC address.

Advanced Settings

- On the Advanced Settings page, you can change the docking station's host name, update firmware, and adjust the time.

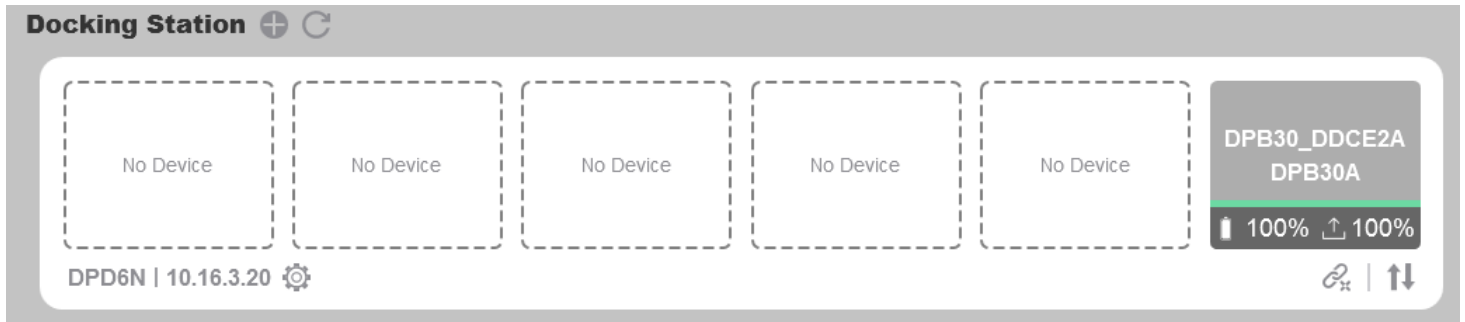
3-3. Disconnecting Docking Station and Updating Camera Firmware



- Click  to disconnect the docking station.
- Click  to check the firmware version of all cameras connected to the docking station and update the firmware.

4. Settings

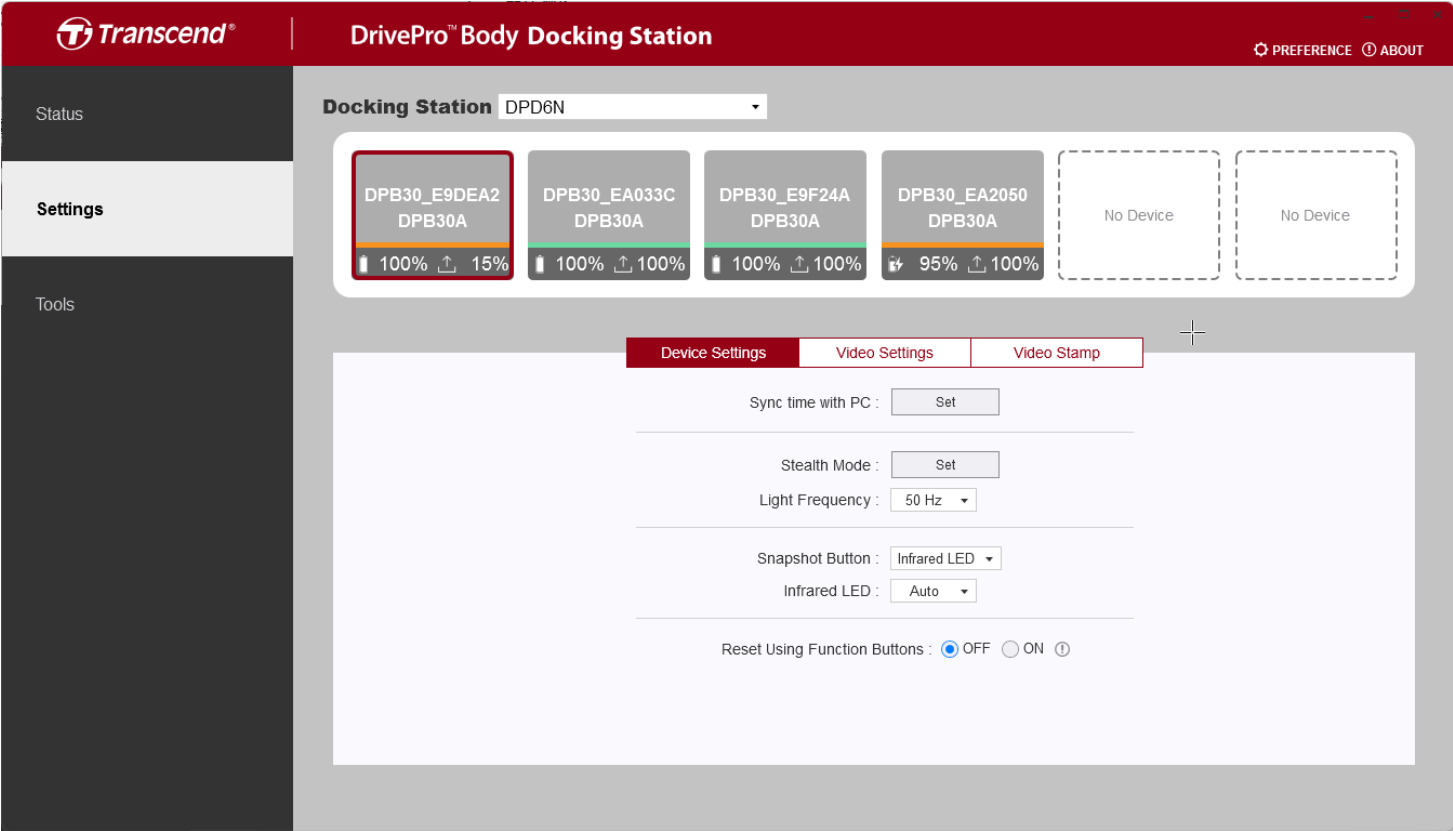


The **Settings** page allows you to adjust the device, video and video stamp settings for cameras connected to the docking station. Select the docking station, then choose the camera you want to configure.




Device Settings



DPB30

Function	Description / Options
Sync time with PC	Click the “Set” button to sync the time of the device with the PC.
Bluetooth	Turn Bluetooth on/off.
	OFF / ON



Function	Description / Options	
Device Alerts	Stealth Mode	Turn on/off Stealth mode. When the Stealth mode is on, the light indicators and buzzer are disabled.
		ON / OFF
	LED Indicator	Turn on/off LEDs when recording.
		ON / OFF
	Buzzer	Turn on/off Buzzer when recording.
		ON / OFF
	Vibrator	Turn on/off Vibrator when recording.
		ON / OFF
Light Frequency	Select the appropriate frequency to avoid flashing A/C light.	
	50 Hz / 60 Hz	
Snapshot Button	Adjust the long-press snapshot button  setting to enable the infrared LEDs or the audio recording function.	
	Infrared LED / Audio Recording	
Infrared LED	Select to activate the Infrared LEDs manually or automatically.	
	Manual / Auto (default)	
Reset Using Function Buttons	When the power is on, press the power button  and snapshot button  simultaneously for 5+ seconds to format and reset the device. After that, the camera will turn off. (Default: OFF).	

DPB40

Function	Description / Options	
Time Zone	Select your time zone.	
Sync time with PC	Click the “Set” button to sync the time of the device with the PC.	
GPS	Switch GPS on/off.	
	OFF / ON	
Bluetooth	Turn Bluetooth on/off.	
	OFF / ON	
Device Alerts	Stealth Mode	Turn on/off Stealth mode. When the Stealth mode is on, the light indicators and buzzer are disabled.
		ON / OFF
	LED Indicator	Turn on/off LEDs when recording.
		ON / OFF
	Buzzer	Turn on/off Buzzer when recording.
		ON / OFF
	Vibrator	Turn on/off Vibrator when recording.
		ON / OFF
Light Frequency	Select the appropriate frequency to avoid flashing A/C light.	
	50 Hz / 60 Hz	
Snapshot Button	Set the long press of the  Snapshot button to either enable the infrared LEDs or activate the audio recording function.	
	Infrared LED / Audio Recording	
Infrared LED	Select to activate the Infrared LEDs manually or automatically.	

Function	Description / Options
	Manual / Auto (default)
Reset Using Function Buttons	<p>To format and reset the device, press and hold the  Power and  Snapshot buttons simultaneously for 5 seconds while the power is on. Afterward, the camera will turn off.</p> <p>(Default: OFF)</p>

DPB60

Function	Description / Options	
Time Zone	Select your time zone.	
Sync time with PC	Click the “Set” button to sync the time of the device with the PC.	
Device Alerts	Stealth Mode	Turn on/off Stealth mode. When the Stealth mode is on, the light indicators and buzzer are disabled.
		ON / OFF
	LED Indicator	Turn on/off LEDs when recording.
		ON / OFF
	Buzzer	Turn on/off Buzzer when recording.
		ON / OFF
	Vibrator	Turn on/off Vibrator when recording.
		ON / OFF
Light Frequency	Select the appropriate frequency to avoid flashing A/C light.	
	50 Hz / 60 Hz	
Audio Sample Rate	Set audio sample rate. The higher the frequency, the better the sound quality.	
	48000 Hz / 44100 Hz / 32000 Hz / 24000 Hz / 22050 Hz	
Reset Using Function Buttons	When the power is on, press the  Power and  Snapshot buttons simultaneously for 5 seconds to format and reset the device. After that, the camera will turn off. (Default: OFF)	


DPB70

Function	Description / Options	
Time Zone	Select your time zone.	
Sync time with PC	Click the “Set” button to sync the time of the device with the PC.	
GPS	Switch GPS on/off.	
	OFF / ON	
Bluetooth	Turn Bluetooth on/off.	
	OFF / ON	
Device Alerts	Stealth Mode	Turn on/off Stealth mode. When the Stealth mode is on, the light indicators and buzzer are disabled.
		ON / OFF
	LED Indicator	Turn on/off LEDs when recording.
		ON / OFF
	Buzzer	Turn on/off Buzzer when recording.
		ON / OFF
	Vibrator	Turn on/off Vibrator when recording.
		ON / OFF
Light Frequency	Select the appropriate frequency to avoid flashing A/C light.	
	50 Hz / 60 Hz	
Audio Sample Rate	Set the audio sampling frequency. The higher the frequency, the better the sound quality.	
	48000 Hz / 44100 Hz / 32000 Hz / 24000 Hz / 22050 Hz	
Reset Using Function	When the power is on, press the Power and Snapshot buttons simultaneously for 5 seconds to format and reset the device. After that, the camera will turn off.	

Function	Description / Options
Buttons	(Default: OFF).

Video Settings

DPB30


Function	Description / Options
Resolution	Set the quality for video recording.
	1440P/30FPS / 1080P/60FPS / 1080P/30FPS / 720P/30FPS / 480P/30FPS
Video Format	Set the recording file format.
	MOV / MP4
Loop Recording	Overwrite the old video files with new ones.
	ON / OFF (default)
Video Length	Set the recording length of each recorded video.
	3 mins / 5 mins / 10 mins
Microphone	Turn on/off the microphone during video recording.
	ON / OFF
Default Recording Mode	Select the default recording mode.
	Buffering mode / Recording mode
Buffered Video Length	Set the buffered video length to record footage that happens prior to activating the Recording mode.  Note: The resolution settings determine the maximum length of videos recorded in Buffering mode.
	30 seconds / 60 seconds / 90 seconds / 120 seconds
Buffering Recording Audio	Turn on/off the microphone in Buffering mode.
	ON / OFF

DPB40

Function	Description / Options
Resolution	Set the resolution/quality for video recording.
	1440P/60FPS / 1440P/30FPS / 1080P/30FPS / 720P/30FPS
Image Stabilization	Enable or disable image stabilization. 🔔 Note: When image stabilization is enabled, the available resolution options are 1440P/30FPS and 1080P/30FPS.
	OFF / ON
Video Format	Set the recording file format.
	MOV / MP4
Loop Recording	Overwrite the old video files with new ones.
	OFF (default) / ON
Video Length	Set the recording length of each recorded video.
	3 mins / 5 mins / 10 mins
Microphone	Turn on/off the microphone during video recording.
	OFF / ON
Default Recording Mode	Select the default recording mode.
	Buffering mode / Recording mode
Buffered Video Length	Set the buffered video length to record footage that happens prior to activating the Recording mode. 🔔 Note: <ul style="list-style-type: none"> · The resolution settings determine the maximum length of videos recorded in Buffering mode. · When the resolution is set to 1440P/60FPS or 1440P/30FPS, the available options for Buffered Video Length are 30 seconds and 60 seconds.
	30 seconds / 60 seconds / 90 seconds / 120 seconds

Function	Description / Options
Buffering Recording Audio	Turn on/off the microphone in Buffering mode.
	OFF / ON

DPB60

Function	Description / Options
Resolution	Set the resolution/quality for video recording.
	1080P/30FPS / 720P/30FPS / 480P/30FPS
Loop Recording	Overwrite the old video files with new ones.
	OFF (default) / ON
Video Length	Set the recording length of each recorded video.
	3 mins / 5 mins / 10 mins
Microphone	Turn on/off the microphone during video recording.
	OFF / ON
Default Recording Mode	Select the default recording mode.
	Buffering mode (default) / Recording mode
Buffered Video Length	Set the buffered video length to record footage that happens prior to activating the Recording mode.  Note: The resolution settings determine the maximum length of videos recorded in Buffering mode.
	30 seconds / 60 seconds / 90 seconds / 120 seconds (default)
Buffering Recording Audio	Turn on/off the microphone in Buffering mode.
	OFF / ON

DPB70


Function	Description / Options
Resolution	Set the quality for video recording.
	1440P/30FPS / 1080P/30FPS / 720P/30FPS / 480P/30FPS
Video Format	Set the recording file format.
	MOV / MP4
Loop Recording	Overwrite the old video files with new ones.
	ON / OFF
Video Length	Set the recording length of each recorded video.
	3 mins / 5 mins / 10 mins
Light Frequency	Select the appropriate frequency to avoid flashing A/C light.
	50 Hz / 60 Hz
Microphone	Turn on/off the microphone during video recording.
	ON / OFF
Default Recording Mode	Select the default recording mode.
	Buffering mode / Recording mode
Buffered Video Length	Set the buffered video length to record footage that happens prior to activating the Recording mode.
	30 seconds / 60 seconds / 90 seconds / 120 seconds
Buffering Recording Audio	Turn on/off the microphone in Buffering mode.
	ON / OFF

Video Stamp

Function	Description / Options
Video Stamp	Display the video recording time and the video label.
	OFF / ON
Date Format	Set the date format.
	Y/M/D / M/D/Y / D/M/Y
Time Format	Select the 24-hour clock or the 12-hour clock.
	24HR / AM/PM
Watermark	Display the Transcend logo watermark on photos or videos.
	OFF / ON

5. Tools

On the **Tools** page, you can update firmware, set/change/disable passwords, format the disk, or reset the DrivePro Body to its default settings.

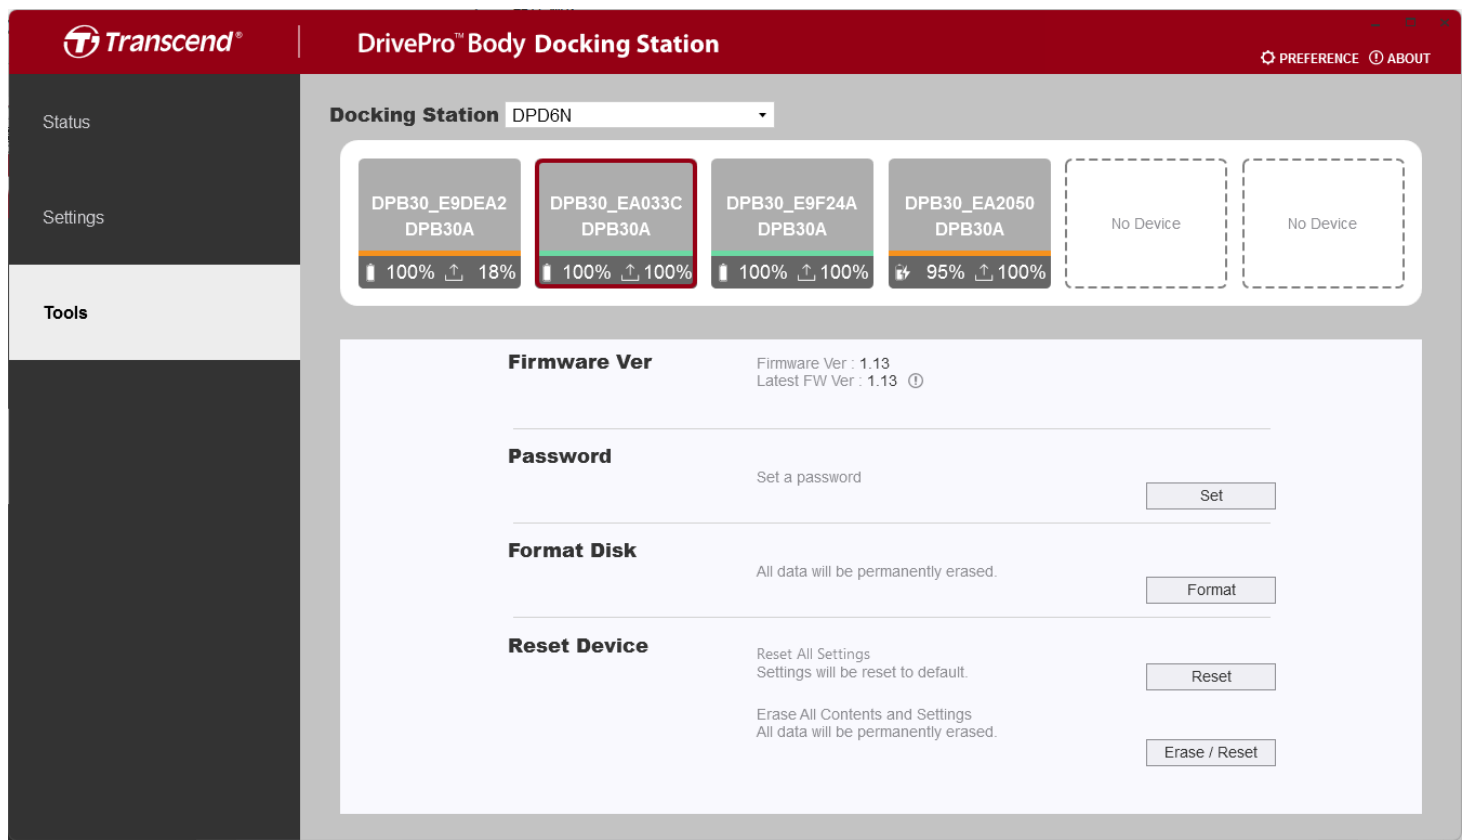

"Note"

- Formatting the disk or resetting the device will permanently delete all data.

- **Firmware Ver:** Update your firmware to the latest version.
- **Password:** Set a password for the device. If a password is set, you must enter it to proceed with further operations.
- **Format Disk:** Format the device's disk.
- **Reset Device:** Reset to factory settings or erase all content and settings.

6. Support

If you cannot find the answer to your question in the user manual, we recommend visiting Transcend's official website for technical support services: https://www.transcend-info.com/Support/contact_form