



Transcend Wi-Fi SD Card Compatibility List

2016/11/09

1. This Transcend Wi-Fi SD Card Compatibility List only provides the devices which basic function may be compatible with Transcend Wi-Fi SD Card, and is effective upon its release on Transcend official website. Transcend reserves the right to update this List from time to time.

2. There is no guarantee that Transcend Wi-Fi SD Card is compatible with all devices having SD Card host, or all the functions of listed devices are supported by Transcend Wi-Fi SD Card.

3. For more information about our warranty policy, please check Transcend Warranty Policy.

[Transcend Warranty Policy](#)

○ Compatible

× Not compatible

Canon				
Model name	Date	Still image shooting	Video recording	Wireless transfer
IXY 90F / PowerShot ELPH 115 HS / IXUS 132	2013/Q1	○	◎	○

◎ Continuous shooting or video recording while Wi-Fi is turned on may cause errors to the cameras.
Please turn-off Wi-Fi when continuous shooting or video recording.

Casio				
Model name	Date	Still image shooting	Video recording	Wireless transfer
EX-Z2	2009/Q2	○	○	×

Fujifilm				
Model name	Date	Still image shooting	Video recording	Wireless transfer
X10*	2011/Q3	○	○	○

*The Wi-Fi will not shot down when the camera is off, please turn off Wi-Fi manually by app.

Nikon				
Model name	Date	Still image shooting	Video recording	Wireless transfer
D300s*	2009/Q3	○	○	○
D3100*	2010/Q3	○	○	○
D3200*	2012/Q2	○	○	○
D5100*	2011/Q2	○	○	○
D5200*	2012/Q4	○	○	○
D600*	2012/Q3	○	○	○
D610*	2014/Q3	○	○	○
D7000*	2010/Q3	○	○	○
D7100*	2013/Q1	○	○	○
D800/D800E*	2012/Q1	○	○	○
D90*	2008/Q3	○	○	○

*Please adjust "Auto-meter off delay" or "Stand by time" in C2 setting in order to avoid Wi-Fi disconnection.
Or turn-on "Live View" when using Wi-Fi transmission.

Olympus

Model name	Date	Still image shooting	Video recording	Wireless transfer
OM-D E-M5 ★	2012/Q1	○	○	○

★ In some special conditions, this model can only recognize the Wi-Fi SD card if you insert the card while the camera is turned on.

Panasonic

Model name	Date	Still image shooting	Video recording	Wireless transfer
DMC-G2	2010/Q1	◎	○	▲
DMC-G5	2012/Q3	◎	○	▲
DMC-G5X	2012/Q3	◎	○	▲
DMC-GF5	2012/Q2	◎	○	○
DMC-GX1	2011/Q4	◎	○	○
DMC-FH3	2010/Q1	◎	◎	▲
DMC-FP1	2010/Q1	◎	○	▲
DMC-FP3	2010/Q1	○	◎	▲
DMC-FX700	2010/Q4	◎	○	▲
DMC-FZ100	2010/Q3	◎	○	▲
DMC-S1	2013/Q1	○	○	▲
DMC-TS2	2010/Q1	○	◎	▲
DMC-ZS25	2015/Q1	○	○	▲
DMC-ZS7	2010/Q1	◎	○	▲

◎ Continuous shooting or video recording while Wi-Fi is turned on may cause errors to the cameras.
Please turn-off Wi-Fi when continuous shooting or video recording.

▲ Wi-Fi will be disconnected while the camera is in continuous shooting mode or video recording mode.

Pentax

Model name	Date	Still image shooting	Video recording	Wireless transfer
K-5	2010/Q3	○	◎	○

◎Video recording may stop after a certain period. (4~5mins)

Sony

Model name	Date	Still image shooting	Video recording	Wireless transfer
DSC-HX5V	2010/Q1	×	×	×
DSC-TX100V*	2011/Q1	○	○	○
DSC-TX5	2010/Q1	×	×	×
DSC-TX7	2010/Q1	×	×	×
DSC-TX9	2010/Q3	×	×	×
DSC-WX7	2011/Q1	×	×	×
DSLR-α55	2009/Q3	×	×	×

*May have problems after formatting the Card on the camera, and would suggest executing the format function on PC.